


型式表示方法

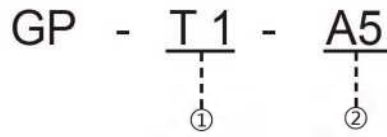

①適用パッド

記号	T1	T2	T3	T4
	GP-02U	GP-10U	GP-20U	GP-40U
	GP-04U	GP-13U	GP-25U	GP-50U
	GP-06U	GP-16U	GP-32U	GP-40C
	GP-08U	GP-10C	GP-20C	GP-50C
	GP-06B	GP-13C	GP-32C	GP-40B
	GP-08B	GP-16C	GP-20B	GP-50B
適用パッド	GP2-B06C	GP-10B	GP-25B	/
	GP2-B08C	GP-13B	GP-32B	
	GP2-05UT	GP-16B	GP2-B25J	
	GP2-06UT	GP2-09J	GP2-B30J	
	GP2-10UT	GP2-14J		
	GP2-13UT	GP2-16J		
	GP2-16UT			
	GP2-18UT			
	GP2-20UT			
	GP2-10CT			
	GP2-13CT			
	GP2-16CT			
	GP2-06J			
	GP2-B10J			
	GP2-B15J			
	GP2-2004U			
	GP2-3507U			
	GP2-4010U			

②ネジサイズ

記号	規格	接続方式	T1	T2	T3	T4
A5	M5X0.8	おねじ	●	●	—	—
A6	M6X1	おねじ	●	●	●	●
A8	M8X1	おねじ	—	—	●	●
B5	M5X0.8	めねじ	●	●	●	—
B6	M6X1	めねじ	●	●	●	●
B8	M8X1	めねじ	—	—	—	●
B01	Rc1/8	めねじ	—	—	—	●
N01	NPT1/8	めねじ	—	—	—	●
T01	NPTF1/8	めねじ	—	—	—	●

※"●"付、"—"無し

外形寸法図

型式	GP-T1-A5/A6	
	適用パッド	
	GP-02U	GP-06B
	GP-04U	GP-08B
	GP-06U	GP2-05UT
	GP-08U	GP2-06UT
	GP-2004U	GP2-10UT
	GP-3507U	GP2-13UT
	GP-4010U	GP2-16UT
	GP2-B06C	GP2-18UT
	GP2-B08C	GP2-20UT
	GP2-10CT	GP2-06J
	GP2-13CT	GP2-B15J
	GP2-16CT	GP2-B10J
型式	A	B
GP-T1-A5	M5X0.8	7
GP-T1-A6	M6X1	8

型式	GP-T1-B4/B5	
	適用パッド	
	GP-02U	GP-06B
	GP-04U	GP-08B
	GP-06U	GP2-05UT
	GP-08U	GP2-06UT
	GP-2004U	GP2-10UT
	GP-3507U	GP2-13UT
	GP-4010U	GP2-16UT
	GP2-B06C	GP2-18UT
	GP2-B08C	GP2-20UT
	GP2-10CT	GP2-06J
	GP2-13CT	GP2-B15J
	GP2-16CT	GP2-B10J
型式	A	B
GP-T1-B4	M5X0.8	7
GP-T1-B5	M6X1	8

型式	GP-T2-A5/A6		
適用パッド			
GP-10U GP-13U GP-16U GP-10C GP-13C GP-16C GP-10B GP-13B GP-16B GP2-09J GP2-14J GP2-16J			
型式	A	B	E
GP-T2-A5	M5X0.8	21	4
GP-T2-A6	M6X1	26	3

型式	GP-T2-B5/B6	
適用パッド		
GP-10U GP-13U GP-16U GP-10C GP-13C GP-16C GP-10B GP-13B GP-16B GP2-09J GP2-14J GP2-16J		
型式	A	B
GP-T2-B5	M5X0.8	7
GP-T2-B6	M6X1	8

型式	GP-T3-A6	
適用パッド		
GP-20U GP-25U GP-32U GP-20C GP-25C GP-32C GP-20B GP-25B GP-32B GP2-B25J GP2-B30J		

型式	GP-T3-B5/B6	
適用パッド		
GP-20U GP-25U GP-32U GP-20C GP-25C GP-32C GP-20B GP-25B GP-32B GP2-B25J GP2-B30J		
型式	A	B
GP-T3-B5	M5X0.8	5
GP-T3-B6	M6X1	6

型式	GP-T3-A8	
適用パッド		
GP-20U GP-25U GP-32U GP-20C GP-25C GP-32C GP-20B GP-25B GP-32B GP2-B25J GP2-B30J		

型式	GP-T4-B6/B8		
適用パッド			
GP-40U GP-50U GP-40C GP-50C GP-40B GP-50B			
型式	A	B	E
GP-T4-B6	M6X1	6	4.9
GP-T4-B8	M8X1	8	7.5

型式	GP-T4-A6/A8			
適用パッド				
GP-40U GP-50U GP-40C GP-50C GP-40B GP-50B				
型式	A	B	D	E
GP-T4-A6	M6X1	26	8	3
GP-T4-A8	M8X1	16	12	4.5

型式	GP-T4-B01/N01/T01	
適用パッド		
GP-40U GP-50U GP-40C GP-50C GP-40B GP-50B		
型式	A	B
GP-T4-B01	Rc1/8	6.2
GP-T4-N01	NPT1/8	6.9
GP-T4-T01	NPTF1/8	6.9